

Welcome to your new Galateadoll experience! We are pleased that you have chosen our brand for a product designed to offer companionship and enjoyment. To ensure that you get the most out of your Galateadoll, please follow the instructions provided in this user guide carefully.

****Product Overview:****

The Galateadoll is crafted with high-quality materials to provide a lifelike experience. Each doll is equipped with articulated joints for realistic positioning and comes with customizable features.

****Unboxing:****

- Carefully remove the doll from its packaging, ensuring not to use sharp objects that might damage the doll's skin. - Verify all components listed on the inventory sheet are included in the box.

****Assembly (If necessary):****

- Depending on the model, some assembly may be required. Follow the specific instructions for attaching any parts such as limbs or the head.

****Handling and Positioning:****

- Always handle your Galateadoll with care.
- When moving the doll, avoid dragging it or applying excessive force to the joints.
- Joints may be stiff initially but will loosen over time with proper use.

****Cleaning and Maintenance:****

- Clean the doll following each use with a mild, antibacterial soap and warm water.
- Avoid immersing the doll's head or any electronic components in water.
- Use a soft cloth to dry the doll thoroughly before storage.
- Do not use harsh chemicals or abrasive cleaning tools.
- Powder the doll with a light coating of cornstarch (not talcum powder) to maintain the skin's softness.

****Attire and Usage:****

- You may dress the doll in any garments of your choice. However, ensure that the clothing is colorfast to avoid staining the doll's skin. - Use only water-based lubricants if necessary

****Storage:****

- Store your doll in a cool, dry place away from direct sunlight to prevent material degradation.
- Do not place heavy objects on the doll when storing for an extended period.

****Safety Precautions:****

- Do not expose the doll to extreme temperatures.
- Keep the doll away from sharp objects to prevent tearing or puncturing the skin.
- The doll is designed for adult use only.

****Safety Precautions:****

- Do not expose the doll to extreme temperatures.
- Keep the doll away from sharp objects to prevent tearing or puncturing the skin.
- The doll is designed for adult use only.

****Safety Precautions:****

- Do not expose the doll to extreme temperatures.
- Keep the doll away from sharp objects to prevent tearing or puncturing the skin.
- The doll is designed for adult use only.

By adhering to these guidelines, you can enjoy your Galateadoll for many years to come. Remember, proper maintenance and care are crucial to your doll's longevity and your satisfaction.



English Wireless Touch Movement SX-07

1、 Button: Long press to turn on/off; Short press to reset; Quickly double-click to open or close the conversation function.

2、 English dialogue instructions

- | | |
|------------------------------|-------------------------|
| 1.Where do you come from | 11.I miss you so much |
| 2.May I have your name | 12.Let me hug you |
| 3.How old are you | 13.you got big boob |
| 4.You are so beautiful | 14.Let's go for a fuck |
| 5.What do you like best | 15.Do I have a big cock |
| 6.What would you like to eat | 16.Do you want a condom |
| 7.What do your parents do | 17.Higher voice |
| 8.I'm in a bad mood | 18.Lower voice |
| 9.Am I handsome man | 19.see you again |
| 10.Do you love me | (Shutdown command) |

[Note] The conversation needs to be conducted when the speaker is not producing sound, and inserting headphones allows for simultaneous conversation while the headphones are producing sound. Try to have the conversation in silence.

3、 Automatic sleep function

If there is no touch or no one to talk to for 2 minutes, it will prompt that it is about to enter sleep mode. If there is still no one to talk to after half a minute, it will play the shutdown language and enter sleep mode.

4、 Low voltage&intelligent charging

Flashing when out of battery, with voice prompts, flashing when charging, constantly on when fully charged. Long term no use, it is recommended to charge every three months.

5、 Volume adjustment

The English version says “higher voice” and “lower voice” to the movement.

6、 Touch sound

A set of five touch panels, battery hardware pieces, with positive on the top and negative on the bottom. The battery has a positive screen printed surface and negative on the non screen printed surface. Please align the positive and negative poles, as there is no response when aligned in reverse. It is best not to install the button electronics on the touchpad in advance. If they are installed, they must not be stacked together, as it may cause battery loss.

There is one touch point in the genital area that can sense the frequency of insertion and extraction, producing different moans at different frequencies. In addition, the chest and legs do not undergo frequency detection to better match the sound experience of touching the genital area.

